

PowerBox Systems®



*World Leaders in RC
Power Supply Systems*

SENSOR

V3



Dear customer,

congratulations on your decision to purchase the **PowerBox Sensor V3** from our range. We wish you many hours of pleasure and success with the **PowerBox Sensor V3**!

PRODUCT DESCRIPTION

The **PowerBox Sensor V3** is the third generation of the **PowerBox Sensor**, which is well-known throughout the world. For almost twenty years the **PowerBox Sensor** has represented the standard for small to medium-sized models thanks to its compact format and versatility.

By using the latest components we have been able to reduce the size of the **Sensor V3** significantly. For example, the case is now exactly half as deep (11 mm compared with 22 mm). Nevertheless, the **Sensor V3** still fits neatly in the aperture used by its predecessor.

The introduction of a top-quality aluminium case, machined and anodised, has brought a substantial increase in the unit's cooling efficiency, with the result that the maximum continuous current capacity of the **PowerBox Sensor V3** is around 35% higher. In fact, the peak load capacity is twice as high: the **Sensor V3** can handle more than 20A for several seconds!

The **Sensor V3** offers two user-selectable output voltages: for normal servos it can be set to a regulated 6.0V, while a regulated 7.8V is available for HV servos – provided that the batteries supply the higher input voltage required.

Power to the unit can be drawn from four different battery types: LiPo, Li-Ion, LiFePo, NiMH. Ultra-bright RGB LEDs are fitted to indicate battery voltage; they light up in various colours to display the charge status of the batteries.

ATOM/CORE users also benefit from one special additional feature: both battery voltages can be displayed directly on the transmitter by means of telemetry.

FEATURES

- + High-performance battery backer
- + Ultra-light unit, compact format
- + Double regulated output voltage
- + Redundant switch and regulator circuitry
- + User-selectable output voltage: 6.0V or 7.8V
- + Separate RGB LED voltage indicators for each battery
- + Telemetry support for **ATOM/CORE** systems
- + Supports 4 different battery types: 2S LiPo, 2S Li-Ion, 2S LiFePo and 5S NiMH
- + Regulator monitoring
- + Suppression of servo feedback currents

1. FEATURES AND CONNECTIONS



2. INSTALLING AND CONNECTING THE BATTERIES

The **PowerBox Sensor V3** should be installed in the model in a position where vibration levels are low. Solid GRP fuselage sides in a power model should be fitted with an internal 3 – 4 mm thick plywood plate to minimise vibration, and to provide 'meat' for the retaining screws.

Connect the two batteries of your choice – with correct polarity – to the battery inputs. You can use either two 2S LiPo or Li-Ion, two 2S LiFePo or two 5S NiMH batteries. We recommend the use of **PowerPak 2.5x2 Pro** batteries, which are particularly safe and simple to handle thanks to their integral charge circuitry.

Note regarding home-assembled battery packs: connecting a battery to the unit with reversed polarity will immediately destroy the internal linear regulators!

The backer's outputs can be connected differently depending on the type of receiver used. The outputs of the **Sensor V3** are present as two-core and three-core leads. For all systems except the **ATOM/CORE** the two outputs can be considered to be identical.

If your receiver only has one battery input, simply connect one of the **Sensor V3**'s outputs to the receiver's battery input, and the other to any vacant servo output socket. If there is no servo output available, a Y-lead can be connected to a servo output socket, to which the **Sensor V3** and the servo are connected.

If you are using **ATOM/CORE** receivers please note that the three-core lead must be connected to the receiver's P²BUS input, otherwise the battery telemetry data will not be sent to the transmitter.

Important: always connect the two-core lead to a vacant servo output - not the Fasttrack output! The power supply lead from the P²BUS and Fasttrack connectors to the connected servos may not be sufficient for all the servos connected to the system!

3. SWITCHING ON AND OFF

In contrast to its predecessor, the **Sensor V3** only has one button, and this simplifies the procedure for switching on and off. As with other **PowerBox** devices with a single button, the sequence is as follows:

Hold the button pressed in for one or two seconds until the LEDs light up violet. Now release the button for a moment before pressing it again briefly; this confirms the switching process.

Once switched on, the battery packer can only be switched off again using the button. Intermittent contacts or breaks while in use will not cause the **PowerBox** to switch off. The last switched status is always stored.

4. SETTING THE BATTERY DISPLAY

It is essential to set the correct battery type to ensure that the LED battery indicators work correctly. The first step is to switch the **PowerBox** on, then hold the button pressed in again.

After about five seconds the LEDs will go out, and a sequence of different colours begins. Each colour corresponds to a particular battery type. Simply release the button when the colour matching your battery type is displayed. The battery type is now stored.



Note regarding the LED display: the battery indicators do not follow battery voltage in a linear fashion. We have tested and measured various currently available battery types, and produced an average discharge curve from this information; this discharge curve is used as the basis for a percentage indication of battery state.

The LED indicators correspond to the battery status as follows:



5. SETTING THE OUTPUT VOLTAGE

The **PowerBox Sensor V3** can be set to either of two output voltages: 6.0V for conventional servos, and 7.8V for HV servos. If you opt for the higher setting, please ensure that all the components connected to the system are approved for high-voltage use.

The advantage of regulating the voltage at 7.8V, instead of simply allowing the full battery voltage to pass through, is that it suppresses the high battery voltage present just after charging. The voltage remains stable right from the outset, which means that servo speed and power are constant for a longer period.

If you wish to change the output voltage, hold the button pressed in while you connect one of the batteries. The LED will initially light up green, then switch to red after three seconds. Release the button when the colour is correct for your required output voltage: green = 6.0V, red = 7.8V.

The LED now flashes white to confirm that the set-up process is complete. Repeat the exact procedure with the second battery connection.

Notes on regulator performance:

The maximum current which the **PowerBox Sensor V3** can supply varies according to external factors such as battery type and the selected output voltage, and it is also significantly affected by cooling efficiency. Ideally the battery backer would be installed on the outside of the model, or inside in such a position that at least some airflow is present for cooling. In particular when the **Sensor V3** is used with LiPo or Li-Ion cells, and the output voltage is set to 6.0V, the number of servos connected to the system should not be excessive. At the same time please bear in mind that not all servos are equal: eight small wing servos draw less current than five 30 kg types.

At the 7.8V setting the backer does not have to work hard to regulate the voltage and disperse energy, and this increases the performance of the **PowerBox Sensor V3** substantially. The same applies to the 6.0V output voltage setting if LiFePo or NiMH batteries are used, since the input voltage at the **Sensor V3** is already lower.

If you are not sure whether the **PowerBox Sensor V3** has sufficient capacity for the requirements of your system, move all the servos continuously - with the model on the ground - for about thirty seconds. If the **Sensor V3** becomes hot to the touch (more than 60°C), first check that the servos, pushrods and linkages are in good order. If you find no problems, then you should use the **PowerBox Source** instead, as it is better suited to heavy-duty work.

6. REGULATOR ERRORS


The unit constantly monitors the operation of the voltage regulators. If the output voltage strays outside the correct value, the LEDs indicate this by lighting up violet and flashing rapidly. Regulator errors typically occur when a battery is connected with reversed polarity.

If this should happen, please contact our Service department!

7. SPECIFICATION

Operating voltage:	4,0V – 9,0V
Power supply:	2S LiPo, 2S Li-Ion, 2S LiFePo, 5S NiMh
Current drain, operating	30mA
Current drain, stand-by:	10µA
Peak current capacity:	2 x 10A
Drop-out voltage:	0,25V
Output voltage:	6,0V/ 7,8V stabilised
Supported telemetry system:	P ² BUS
Dimensions:	65 x 26 x 11 mm
Weight:	30 g
Temperature range:	-30°C to +105°C

8. DIMENSIONS

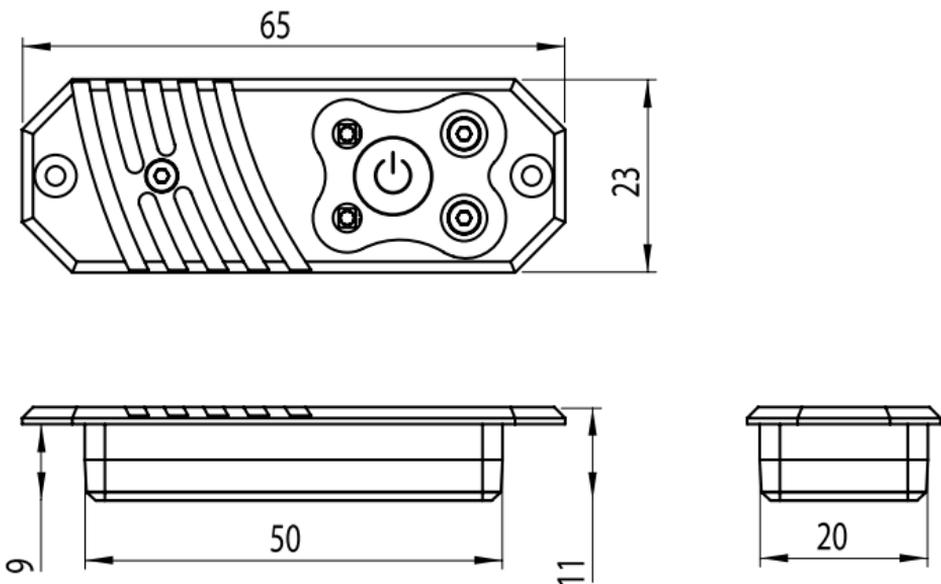

9. SET CONTENTS

- **PowerBox Sensor V3**
- 2x retaining screws
- Operating instructions in English and German

10. SERVICE NOTE

We make every effort to provide a good service to our customers, and have now established a Support Forum which covers all queries relating to our products. This helps us considerably, as we no longer have to answer frequently asked questions again and again. At the same time it gives you the opportunity to obtain assistance all round the clock, and even at weekends. The answers come from the **PowerBox team**, which guarantees that the answers are correct.

Please use the Support Forum **before** you contact us by telephone.

You will find the forum at the following address:

www.forum.powerbox-systems.com



11. EU DECLARATION OF CONFORMITY

This device complies with the essential requirements and other relevant provisions of Directives 2011/65/EU + 2015/863/EU (RoHS) and 2014/30/EU (EMC). The EU Declaration of Conformity for the **PowerBox Sensor V3** can be found under the following link:

www.powerbox-systems.com/en/content/certificates

12. GUARANTEE CONDITIONS

At **PowerBox-Systems** we insist on the highest possible quality standards in the development and manufacture of our products. They are guaranteed **“Made in Germany”!**

That is why we are able to grant a **24 month guarantee** on our **PowerBox Sensor V3** from the initial date of purchase. The guarantee covers proven material faults, which will be corrected by us at no charge to you. As a precautionary measure, we are obliged to point out that we reserve the right to replace the unit if we deem the repair to be economically unviable.

Repairs which our Service department carries out for you do not extend the original guarantee period.

The guarantee does not cover damage caused by incorrect usage, e.g. reverse polarity, excessive vibration, excessive voltage, damp, fuel, and short-circuits. The same applies to defects due to severe wear.

We accept no liability for transit damage or loss of your shipment. If you wish to make a claim under guarantee, please send the device to the following address, together with proof of purchase and a description of the defect:

SERVICE ADDRESS

PowerBox-Systems GmbH
Dr.-Friedrich-Drechsler-Str. 35
86609 Donauwörth
Germany



13. SAFETY INFORMATION FOR THE INTENDED USE OF THE POWERBOX SYSTEMS

a) Intended use

- The **PowerBox Sensor V3** is intended exclusively for use in remote-controlled modelling applications – particularly in the field of model aircraft. It is not intended for use in manned aviation, safety-critical or medical applications. It may only be used by qualified persons.

b) General safety instructions

- It is essential that you read the complete operating instructions before commissioning.
- Installation and connection may only be carried out when the system is switched off.
- Always ensure a safe power supply and correctly polarised connections. There is no polarity protection – incorrect polarity will permanently damage the integrated voltage regulator.
- Each battery must be able to reliably supply the model on its own; redundancy through two independent power sources is recommended.
- Keep all components dry and dust-free.

c) Commissioning and operation

- A complete range test must be carried out before the first flight.
- Check the function of all channels and telemetry data before each use.
- Only use approved batteries and observe the permissible voltage ranges.
- Install in the model mechanically stress-free and vibration-damped.
- The use of two receivers is strongly recommended to ensure reliability. Position the receivers as far apart as possible.
- Activate both batteries separately before each flight and check the voltage values.
- Only place in dry environments – never bring into contact with water, moisture or fuel.
- Check all connections, cables and telemetry data before each flight.
- Never open the device – this will invalidate the warranty.

d) Approval information

- This device complies with the requirements of 2011/65/EU + 2015/863/EU (RoHS) and 2014/30/EU (EMC). For operation in other countries, country-specific approvals and regulations must be observed.

e) Disposal

- This product must not be disposed of with household waste. Hand it over to an appropriate collection centre for proper disposal (observe the WEEE Directive).

14. LIABILITY EXCLUSION

We are not in a position to ensure that you observe our instructions regarding installation of the **PowerBox Sensor V3**, fulfil the recommended conditions when using the unit, or maintain the entire radio control system competently.

For this reason we deny liability for loss, damage or costs which arise due to the use or operation of the **PowerBox Sensor V3**, or which are connected with such use in any way. Regardless of the legal arguments employed, our obligation to pay compensation is limited to the invoice total of our products which were involved in the event, insofar as this is deemed legally permissible.

We wish you every success with your new **PowerBox Sensor V3**.

A handwritten signature in blue ink, appearing to be 'D. R.', with a small horizontal line at the end.

Donauwörth, July 2025

PowerBox-Systems GmbH

Dr.-Friedrich-Drechsler-Straße 35
86609 Donauwörth
Germany



+49 906 99999-200



sales@powerbox-systems.com

www.powerbox-systems.com